

FN Mode: You can lock & unlock Fn mode by short pressing FN + ESC by turn.

FN MULTIMEDIA KEY

2 Unlock Fn Mode: FN + ESC

DUAL-FUNCTION KEY

Start 👭

Alt-Right

Ctrl-Right

Alt

Windows / Android (W / A)

Switching Steps:

① Choose iOS layout by pressing Fn+I.
② Choose MAC layout by pressing Fn+O
③ Choose Windows / Android layout by pressing Fn+P.

Multi-System Layout

ctrl

alt

cmd ೫ alt

md ₩ ctr

Keyboard Layout

fn + I O P W/a

esc

COMBINATION SWITCH


① Lock Fn Mode: No need to press FN key

※ After pairing, FN shortcut is locked in FN mode by default,

and the locking FN is memorized when switching and shutting down.

Windows / Android / Mac / iOS

OTHER FN SHORTCUTS SWITCH

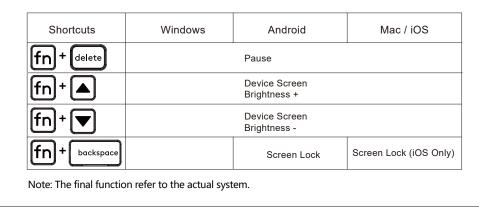

(os)

Mac / iOS (ios&mac)


Control ^

Option 🛰

Command 38

Command 36

Option 🖚

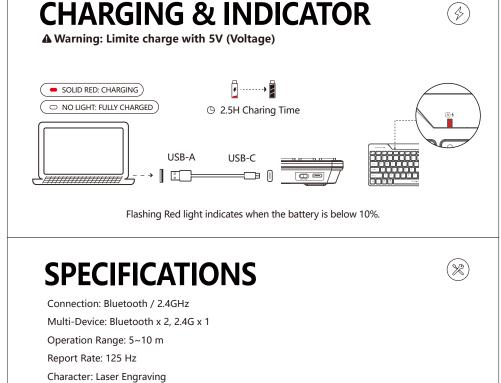

Includes: Keyboard, Nano Receiver, Type-C Adaptor, USB Extension Cable,

System Platform: Windows / Mac / iOS / Chrome / Android / Harmony OS...

(Answer) Interchange and connect up to 3 devices at the same time.

Answer The device you connected last time will be remembered.

(disconnected: 5S, connected: 10S)

4. Please try to avoid charging in the environment below 0°c.

5. Do not remove or replace the battery.

Question Does the keyboard remember the connected device?


Question How can I know the current device is connected or not?


Question How to switch between connected Bluetooth device 1-2?

Answer When you turn on your device, the device indicator will be solid.

Answer By pressing the Bluetooth individual buttons (*1 *1)

Type-C Charging Cable, User Manual

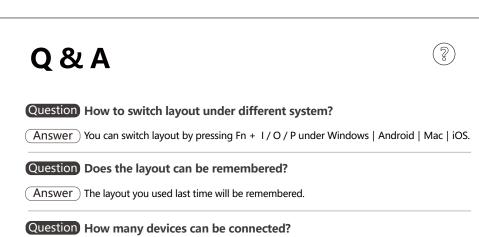

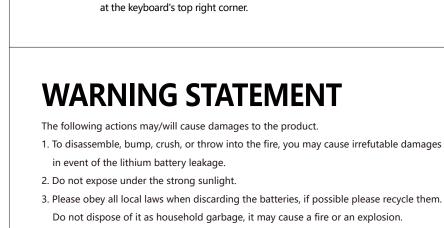

6. Please use the charging cable included in the package to charge the product.

7. Do not use any equipment with voltage exceeding 5V for charging.







